


MICRO SOLENOID VALVE

2 ways - NC (Normally closed)
Direct acting
M5


V164


PROPORTIONAL

FLOW CONTROL

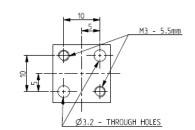



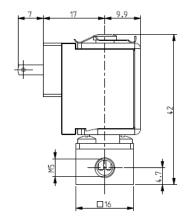

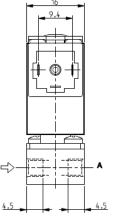



► GENERAL FEATURES

Direct acting micro solenoid valve; minimum overall dimensions.

The flow rate is proportional to the input electric signal.

The chart overleaf shows an example curve of flow rate / electric signal at 3 bar inlet pressure.

Suitable to shut off liquid and gaseous fluids (verify the compatibility of fluid with materials in contact).

► TECHNICAL FEATURES

Maximum allowable pressure (PS) 16 bar Fluid temperature -10°C +90°C

Max viscosity 3°E (~22 cStokes or mm²/s)

► MATERIALS IN CONTACT WITH FLUID

Body Brass
Sealing NBR
Internal components Stainless steel
Seat Brass

Seat Brass
Core tube Stainless steel

► COIL

Continuous duty ED 100% (see note "A" overleaf)
Encapsulation material PA (Polyamide) fiberglass reinforced

Insulation classF (155°C)Ambient temperature-10°C +60°CElectric connectionsDIN 46340

Protection degree IP 65 (EN 60529) with micro plug connector

Voltages DC 12 - 24V

Port size ISO-UNI 4534	Orifice size (mm)	Inlet differential pressure (bar)		Kv (m³/h)	Series et type		Power absorption						
					Valve	Coil	AC (VA)		DC	Sealings	Notes	Weight (kg)	
		Min	Max		vaive	COII	Inrush	Holding	(W)	<u> </u>			
M5	1,6	0	5	0,04	V164B02	ZE30A	-	-	4	NBR	-	0,060	

► NOTES


- These micro-solenoid valves are not suitable for stagnating media subject to vaporization which deposit solid, calcareous, incrusting residues or similar.
- Seal: NBR = Nitrile butylene elastomer
- Contact us for different pressure ratings and different proportionality features (flow rate / electric signal)

BCAE
Industrial Automation


SIRAI[™] - BUSSERO (MI) – Italy - www.sirai.com

青岛秉诚自动化设备有限公司 地址:中国·青岛市重庆南路99号海尔云街甲3号楼7F – Italy - www.sirai.com 服务热线:4006-918-365 网址:http://www.asco.store

传真:(86-532)585-10-365 Email:sales@bechinas.com

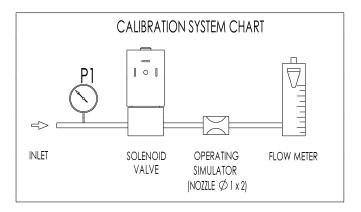

V164B02 – ZE30A (orifice size=1.6mm) CHARACTERISTIC CURVE AT INLET PRESSURE = 3 bar (dehumidified and non-lubricated air) Reference coil 24V DC (See note "A")

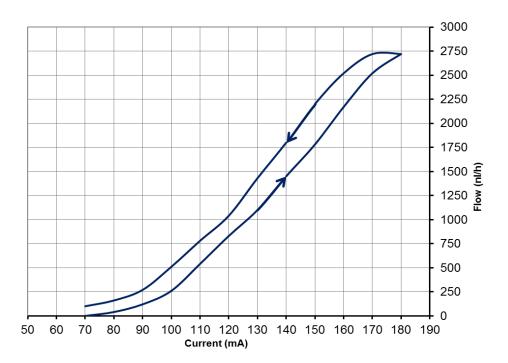

► INSTALLATION

Solenoid valve can be mounted in any position; vertical with coil upwards preferred.

►NOTE "A"

It is necessary to keep the current circulating in the coil constant so as to maintain the solenoid valve in any pre-determined position. In case the solenoid valve is energised by voltage variation, it has to be considered that the resistance of winding increases because of the continued energizing and consequently the power decreases. Therefore, it is necessary to compensate such power decrease by increasing the voltage to re-establish the initial current value.

THE VALIDITY OF REPORTED DATA IS REFERRED TO THE DATE OF ISSUE. POSSIBLE UPDATES ARE AVAILABLE ON REQUEST

传真:(86-532)585-10-365

Email: sales@bechinas.com